
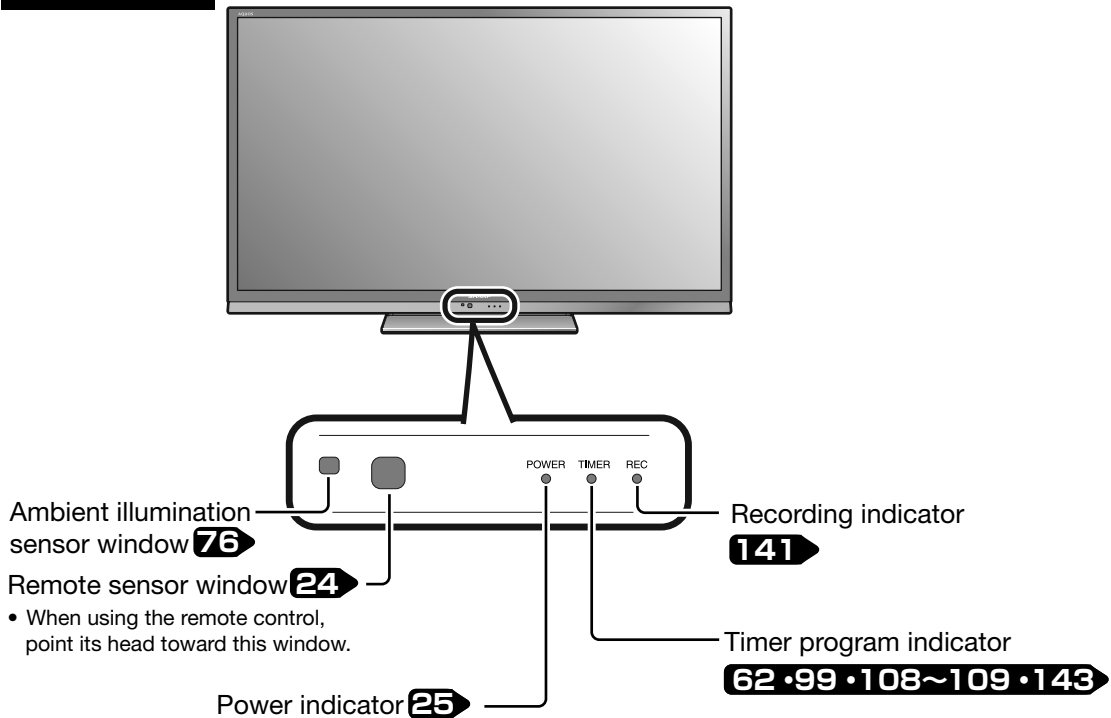


# English Guide


## Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


### Front view



### Right side view

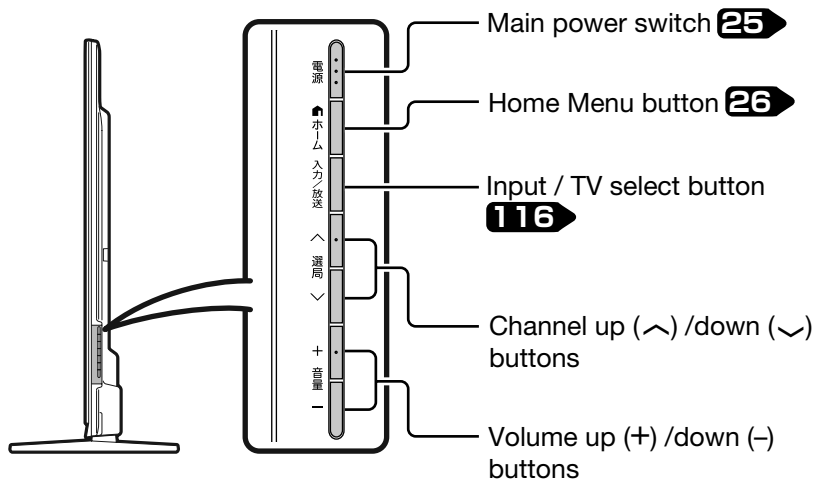

## Back view

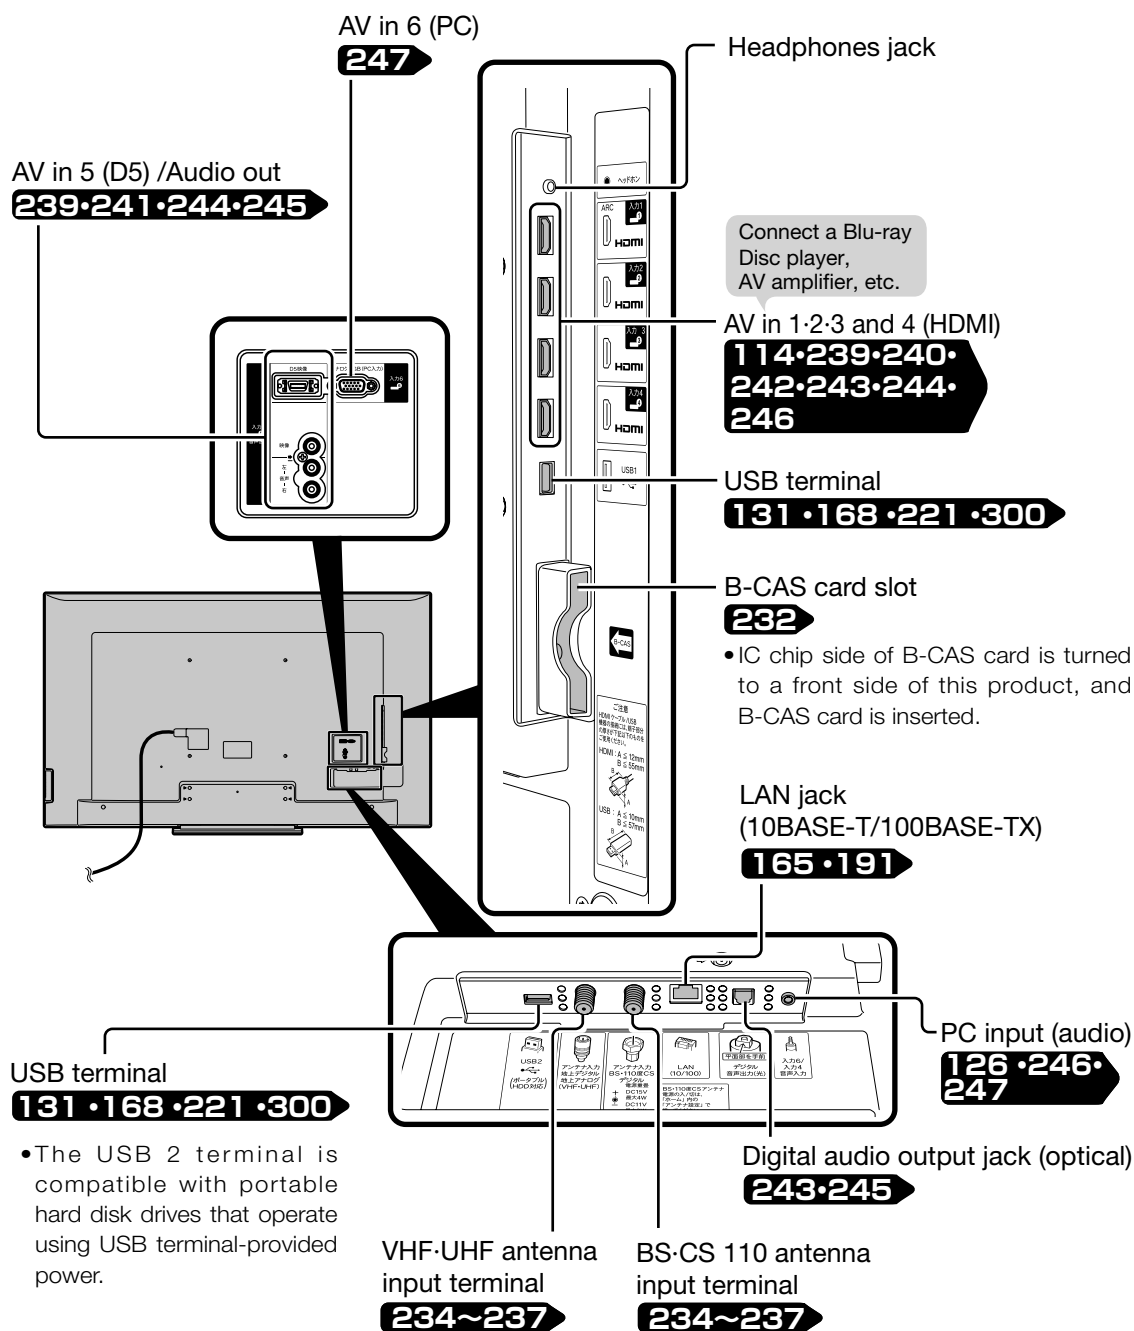

はじめに  
お読みください

テレビを見る／  
便利な使いかた

ファミリンク

ビデオ・オーディオ・  
パソコンをつなぐ

USBハードディスク  
をつないで録る・見る

インターネット／  
ホームネットワーク

設置・接続・  
受信設定

故障かな？／  
エラーメッセージ

お役立ち情報  
(仕様や索引)

English  
Guide

# Remote Control Unit

## Active/Standby **25**

Press to engage the TV set in the active or standby mode.

## Terrestrial digital select **31**

## Terrestrial analog select **31**

## BS select **31**

## CS select **31**

When selecting the CS digital channel for the first time. **255**

データ連動

## Linked data broadcast **34・197**

Press to call the data broadcast linked with the current digital TV program.

## Mute **31・196**

Press to mute audio.

## Volume up (+)/down (-) **31・196**

Press to adjust the volume.

## 番組表(予約) EPG **44・108・143**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## ホーム Display the "Home" Menu **26・27**

Press to start some useful operations of the TV.

番組情報

## Program info **37**

Press to display detailed information on the current digital program.

## Finish

Press to finish menu operation, etc.

録画消去

## Delete recording **160~161**

Press to delete a title recorded on the USB-HDD.

## Split screen **54~55**

Press to switch between the split screen mode and the normal screen mode.

## Operable screen **56**

Press to switch the operable screen when the TV set is in the split screen mode.

## Freeze **35**

Press to freeze the picture.

3桁入力

## Digital channel number input **32・35**

Use to select a digital channel by entering the 3-digit channel number.

## Display **36・37・305**

Press to display or turn off the channel call, etc.

AVポジション

## AV mode select **71**

Press to select the picture/sound setting that best matches the current program.

## Sleep timer **92**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

## Familink **104・114**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## Recording list **151**

Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

カメラ

## Information **33**

Press to display AQUOS Information.

## Channel select **31・196**

- Press to select a channel.
- Use to input a number for various settings.

インターネット

## Internet **181・196・200・202・204**

Press to connect to the internet.

## Channel up (^)/down (v)

## **31・41・196**

Press to select channels in the ascending or descending order.

\*CATV channels are factory set to be skipped. **273**

入力切

## Input select **116**

Press to select the input.

## Display the Tool Menu **26・27・30**

## Cursor (up, down, left, right) **26・27**

Use to select a menu item, column, etc.

## Enter/Confirm **26・27**

Press to confirm a selected setting or menu item.

## Return **26**

Press to go back to the previous screen.

## Color **34・45~49・94**

Use to operate EPGs and data program screens.

## Familink **104~107・110~111・114・141・142・152~155**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切

## Audio select **58・197**

Press to select the audio.

## Previous screen

Press to return to the most recently viewed channel or input.

字幕

## Caption **58・197**

Press to display, select, or turn off captions when watching a digital program with captions.

常連番組

## Recommended programs select **52**

Press to select a program which the TV set recommends.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

# Switching the Display Language to English ホームメニューなどの言語を英語にする


- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。





## ◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

# 1

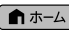Press  
 and  
select with  


Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



# 2

Select with  
  


Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



# 3

Select with  
  
Press  


Select “Language(言語)”.  
「Language(言語)」を選ぶ



# 4

Select with  
  
Press  


Select “English”.

「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

# 5

Press  


Finish this operation.

終了する

はじめに  
お読みください

テレビを見る  
便利な使いかた

ファミリーリンク

ビデオ・オーディオ・  
パソコンをつなぐ

USBハードディスク  
をつないで録る・見る

インターネット/  
ホームネットワーク

設置・接続・  
受信設定

故障かな？/  
エラーメッセージ

お役立ち情報  
(仕様や索引)

English  
Guide

シャープはエコポジティブ。



**省エネ** 明るさセンサー

- テレビを見るお部屋の明るさに合わせて、画面の明るさを自動調整。無駄に消費する電力を低減します。

**省エネ** 「無信号電源オフ」機能

- テレビ放送終了後など、番組が映らない状態になると約15分後に電源がオフになるよう設定ができます。

**MY家電登録の  
ご案内**

詳しくはホームページで→



人と家電と暮らしをつなぐ、シャープの会員サイト

**SHARP i CLUB**

<http://iclub.sharp.co.jp/m/>

SHARP i CLUB は、お客様がご愛用のシャープ製品について、便利な使い方や、製品のサポート・サービス、キャンペーンなど、一人ひとりに合ったサービスをご利用いただける会員様向けサイトです。

ぜひ登録ください。

**お問い合わせ先**

お問い合わせの前にもう一度「故障かな?と思ったら」(278ページ)  
「こんなときは」(297ページ)をご確認ください。

パソコン



メールでのお問い合わせなど

【シャープサポートページ】

シャープ お問い合わせ

検索

<http://www.sharp.co.jp/support/>

お電話



使用方法や修理のご相談など

【お客様相談センター】



**0120 - 001 - 251**

携帯電話・PHSからもご利用いただけます。

おかけ間違いのないようご注意ください。

■IP電話などからフリーダイヤルサービスをご利用いただけない場合は…

電 話	FAX
043 - 331 - 1626	043 - 297 - 2696
〒261-8520 千葉県千葉市美浜区中瀬1-9-2	

**受付時間** ●月曜～土曜:9:00～20:00 ●日曜・祝日:9:00～17:00 (年末年始を除く)

●所在地・電話番号・受付時間などについては、変更になることがあります。(2012.2)

**■ 廃棄時のご注意**

家電リサイクル法では、お客様がご使用済みのテレビ(ブラウン管式、液晶式、プラズマ式)を廃棄される場合は、収集・運搬料金、再商品化等料金(リサイクル料金)をお支払いいただき、対象品を販売店や市町村に適正に引き渡すことが求められています。

**シャープ株式会社**

本 社 〒545-8522 大阪市阿倍野区長池町22番22号  
AVシステム事業本部 〒329-2193 栃木県矢板市早川町174番地



アメリカ大豆協会認定の大豆油インキを使用しています。  
この取扱説明書は再生紙を使用しています。

TINS-F469WJZZ  
12P02-JA-KK